



DevComDroid
Mobile Smart Device
Communicator for Android




Benefits:

- Perform complete HART[®] device configurations using your Android[™] based Tablet or Smartphone
- Uses the registered DD files from the FieldComm Group
- Complete access to all features of the device DD including Methods
- Monitor PV, Multi-variables, and Device Status
- View and edit device Variables
- The most cost-effective DD based handheld HART communication solution available!

Features:

- Easy to use Android interface
- Fast device connect and data view
- Supports HART 5, 6, 7, *WirelessHART*[®] devices, and HART-IP
- Save configurations as text file and PDF file for documenting the device
- Wireless convenience
- Comes with all the latest registered DD's from the FieldComm Group
- No tag limits
- Supports Spanish, Portuguese, French, Swedish, Russian, and Chinese
- 1 Year of free DD and program updates

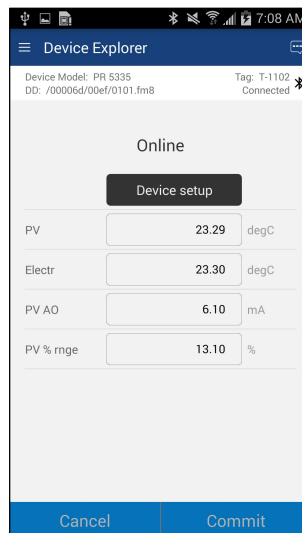

Sample Screen Capture

Specifications:

System Requirements (minimums)

Operating System	Android Jelly Bean (4.3)
Memory RAM	1 GB
Memory ROM	2 GB
Screen	960x540 qHD
Communication Port	Bluetooth, Bluetooth LE, or USB
HART Modem	ProComSol HM-BT-BAT-ER, or equivalent ProComSol HM-BLE ProComSol HM-USB-ISO and HM-USB-PWR ProComSol MOBI-HART, MOBI-FF, or MOBI-CMPLT

Device Descriptions (DD's)

DD Library	Included
Generic DD	Included
Current Library	HCF Release 2020 No. 4 (contact us for latest data)
DD Updates	Quarterly updates for 1 year free Download updates with subscription service

Functions

Monitor PV
Monitor Multi-variables
Monitor Device Status
View and Edit Variables
Sample Execute Methods:
 Trims
 Calibrations
 Loop Tests
 Zero and Span

ProComSol, Ltd

Process Communications Solutions

Phone: 216.221.1550

Toll Free: 877.221.1551

Email: sales@procomsol.com

Web: www.procomsol.com